

SG – Spring Guard

Spring Guards protect the hose cover against abrasion and are constructed of steel wire and plated to resist rust.



Hose	I.D. Part mm Number	SG-060	SG-066	SG-072	SG-084	SG-097	SG-106	SG-113	SG-122	SG-131	SG-155	SG-166	SG-182	SG-209	SG-220	SG-232	SG-270
		15,20	16,75	18,25	21,30	24,60	26,90	28,70	30,95	33,25	39,35	42,15	46,20	53,05	55,85	58,90	68,55
201, 206, 221FR, 244		-4	-5	-6	-8	-10		-12		-16	-20		-24			-32	
213, 285, 293		-4/-5	-6		-8	-10	-12			-16	-20		-24		-32		
301SN, 304			-4	-5	-6	-8	-10		-12		-16			-20		-24	
421RH, 421SN, 421TC, 426, 436, 441, 441RH, 461LT, 462, 462TC, 462ST, 462PU, 463, 471TC, 493, 611HT, 681, 681DB, BCH2, HT2		-4	-5	-6	-8	-10		-12			-16		-20	-24			-32
492, 492TC, 492ST, BCH1, 692, 692PU, 692TC		-4/-5	-6		-8	-10		-12			-16	-20					
372, 372RH, 372TC, 371LT, 701, 701TC						-6	-8		-10	-12		-16		-20		-24	
774, F42							-8			-12	-16			-20	-24		-32
731, 731TC										-12		-16		-20		-24	
801PLUS, 801RH, 804, 821FR, 830M, 836, 837BM, 837PU, 838M, 846		-4/-5	-6		-8	-10		-12		-16							
811, 881, H29, H29ST, H29TC										-12	-16		-20		-24		-32
H31, H31ST, H31TC				-4		-6	-8		-10	-12		-16					
R35, R35TC										-12		-16	-20			-24	
R42, R42ST, R42TC									-10	-12		-16		-20		-24	
R50TC, R56TC				-4		-6	-8		-10	-12	-16			-20			
787, 787TC, 787ST 797, 797TC, 797ST, 797RH		-4		-6		-8	-10		-12		-16		-20		-24		-32
722, 722TC, 722ST					-6	-8		-10		-12	-16						
412, 412ST		-4/-5 -6															
477, 477RH, 477TC, 477ST, 387, 387TC, 387ST, 487, 487TC, 487ST		-4	-5	-6	-8	-10		-12			-16			-20	-24		-32
SX35, SX35LT, SX35TC SX42, SX42LT, SX42TC										-12	-16			-20			
BPK						-6	-8				-12		-16				
FA35						-6	-8		-10	-12		-16		-20			-24